
CannonVoIP

V1.0

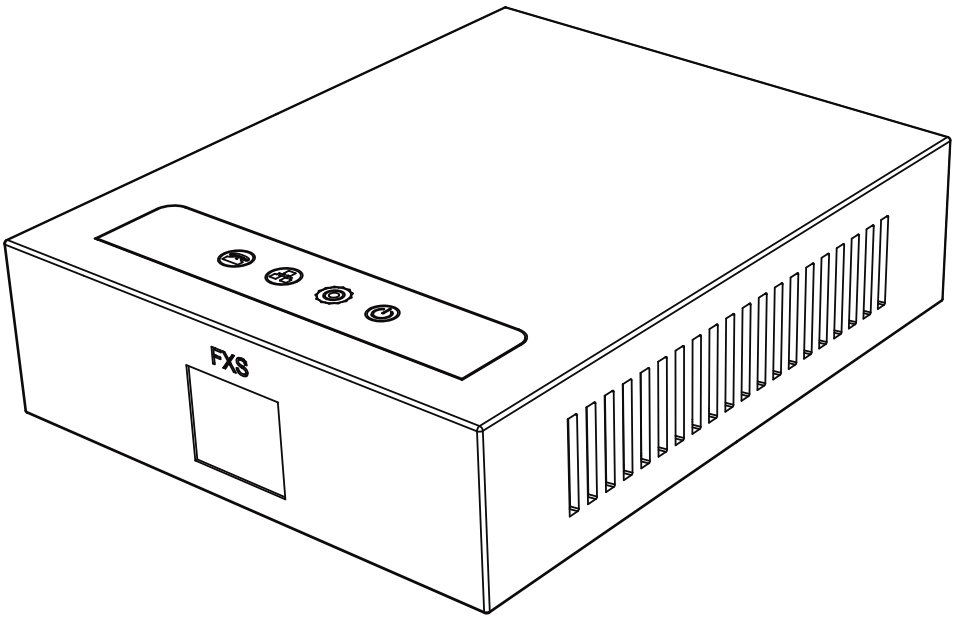


VoIP-ATA-1


Quick Installation Guide

Cannon VoIP
cannonvoip.com | 888-973-0515


Packaging list

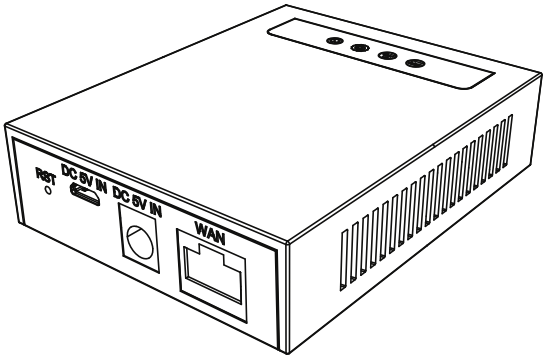


VoIP-ATA-1

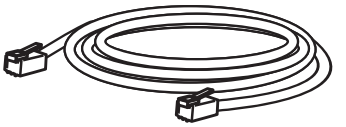

Ethernet Cable

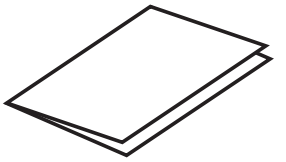

Quick Installation Guide

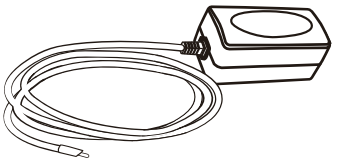



Power Adapter

Status indicator

Ports	**Icon**	**Function**		
Power		Off: Power is invalid	On: Power supply is normal	
Network		Off: not connected	On: connection is normal	Twinkle: network failure
SIP registration		Off: SIP is not registered	On: registration is successful	Twinkle: registration is failed
FXS		Off: N/A	On: Phone is being off hook	

Device ports

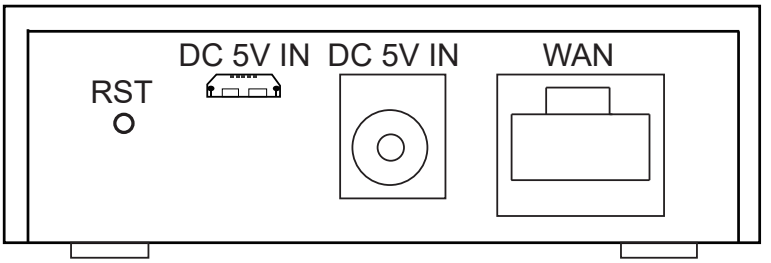

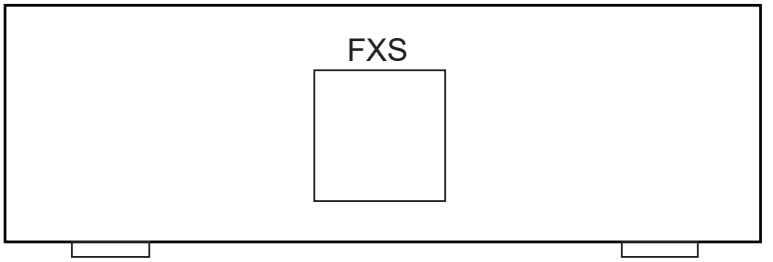

Ports	**Icon**	**Function**
Power	DC 5V IN	Connecting to a power source to the micro-USB or DC Jack
Network	WAN	Connecting to the network.
FXS	FXS	Connecting to the analog phone.
Reset	RST	Restore Default button. When the device is working properly, if you press this button (6 seconds) with a sharp object (such as a pencil) until the LED fast twinkling. Restore function will take effect after you release it.

Device connection

Connect your device, please follow the steps below:
1. Insert a standard RJ11 telephone cable into the FXS port and connect the other end of the telephone cable to a standard touch-tone analog telephone.
2. Insert the ethernet cable into the WAN port of the device and connect the other end of the ethernet cable to an uplink port (a router or a modem, etc.)
3. Insert the power adapter into the device and connect it to a wall outlet.
4. The power and ethernet LEDs will be solidly lit when the device and network is ready for use.

Using your phone

Your analog phone works like any Cannon VoIP extension. Flash means the Flash key on the phone, or a quick tap of the hook switch if the phone has no Flash key.
Hold: press Flash to put the call on hold. Press Flash again to take it back.
Transfer: press Flash, dial #*27 followed by the number, then press #. Hang up and the call goes through.
Transfer with announcement: press Flash, dial #*28 followed by the number, then press #. When they answer, press Flash to connect the two of them.
3-way call: press Flash, dial #*29 followed by the number, then press #. When they answer, press Flash and all three of you are on the call.

Setup

Your VoIP-ATA-1 is set up by Cannon VoIP before it ships. Once it is connected to your network it registers on its own and the SIP light turns solid. There is nothing to configure.
Need help? Call 888-973-0515 or email info@cannonvoip.com.