CannonVoIP V1.0



VoIP-FXO-4

Quick Installation Guide

Cannon VoIP
cannonvoip.com | 888-973-0515

❶ Package List




Gateway | Power Adapter ┌×1 | Ethernet cable | Quick Installation Guide

❷ Interface Introduction

Connect your phone lines (from the phone company or your PBX) to the four FXO ports only. Never plug a telephone or fax machine into them.

1. See the figure below for the appearance of the product and follow it to connect lines.

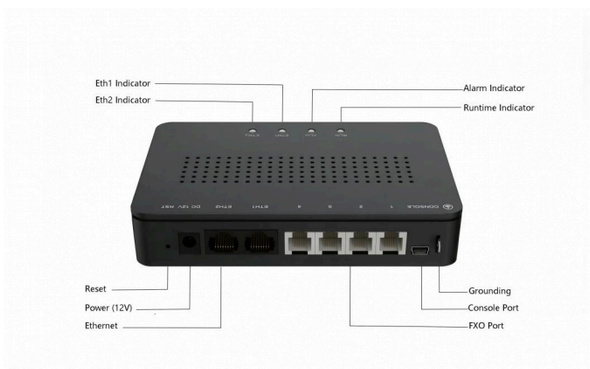


Rear ports

❹ Setup

Your VoIP-FXO-4 is set up by Cannon VoIP before it ships. Connect your phone lines, the network cable and the power adapter. Within a few minutes the RUN light is on and calls on those lines ring your Cannon VoIP phones and apps. There is nothing to configure.

Need help? Call 888-973-0515 or email info@cannonvoip.com.

2. It is recommended to fix 4 rubber foot pads onto the chassis before you place the device directly on a desk or table for use. Make sure the device is well grounded before you connect the power cord! You'd better use a three-pin power socket, or use the grounding stud on the rear panel of the device for earthing.
3. Connect each phone line to one of the FXO ports (1 to 4) with a standard RJ11 phone cord. The matching line light turns red when the port is in use.
4. Connect the network cable to ETH1 and the included 12 V power adapter to the DC 12V jack.
5. If you make your own phone cords, use the pin layout below.

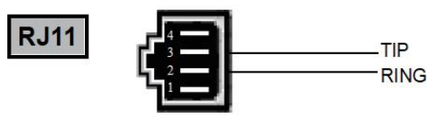

❸ Security Warning

1. As the device will gradually heat up while being used, please maintain good ventilation to prevent sudden failure, ensuring that the ventilation holes are never jammed.
2. During runtime, if the alarm indicator lights up or flashes, it indicates that the device goes abnormal. If you cannot figure out and solve the problem by yourself, call Cannon VoIP at 888-973-0515. Otherwise it may lead to a drop in performance or unexpected errors.
3.To ensure good connection, you shall use the lines from a same pair to connect with a channel while constructing a phone line by yourself.